


一、SNMP configuration information

The community of SNMP: write community: private; read community: public

The version of SNMP: SNMPV1。

If want to configure community of SNMP, please use Simple management tool to configure.

二、MIB instruction of NMU

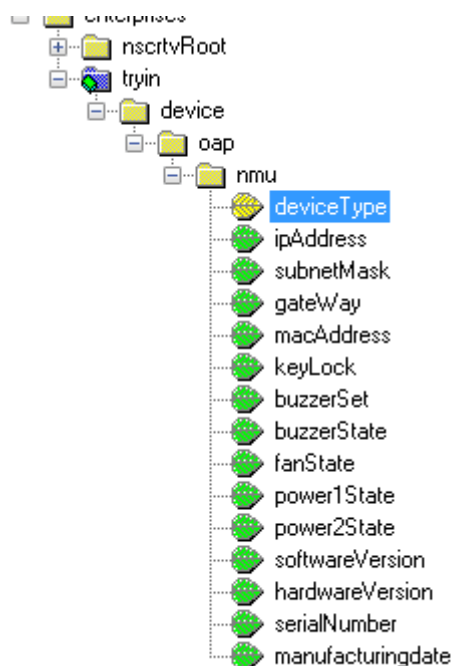

- (1) Device Type: Type of equipment.
- (2) ipAddress: IP Address of equipment.
- (3) subnetMask: Subnet Mask of equipment.
- (4) gateWay: Gateway of equipment.
- (5) macAddress: Mac address of equipment.
- (6) keyLock: Whether or not lock for key(unlock(1): open; lock(0): close).
- (7) buzzerSet: State of buzzer function (on(1): open; off(0): close).
- (8) buzzerState: State of buzzer key(on(1): open; off(0): close).
- (9) fanState: State of fan(on(1): open; off(0): close)
- (10) power1State: State of power1 (on (1): open; off (0): close).
- (11) Power2State: State of power2 (on (1): open; off (0): close).
- (12) softwareVersion: Software Version of equipment.
- (13) hardwareVersion: Hardware Version of equipment.
- (14) serialNumber: Serial number of equipment.
- (15) manufacturingdate: Manufacture date of equipment.